CHAPTER 13: CUTTER SECTION

CONTENTS

1. Theory of Operation
1. Cutter Home Positioning Mechanism 1
2. Cutting Mechanism 3

2. Removal and Assembly
1. Cutter Unit 5

2. Removal and Assembly

1. Cutter Unit

1. Disconnect the power supply from the machine.
2. Remove Master guide plate. (page 14-5)
3. Remove Write roller ass'y. (page 14-5)
4. Remove two mounting screws of the Cutter guide plate and remove the plate.
5. Disconnect the Connector of the Cutter unit.
6. Remove two mounting screws of the Cutter unit and remove the unit.

Precaution in Assembly
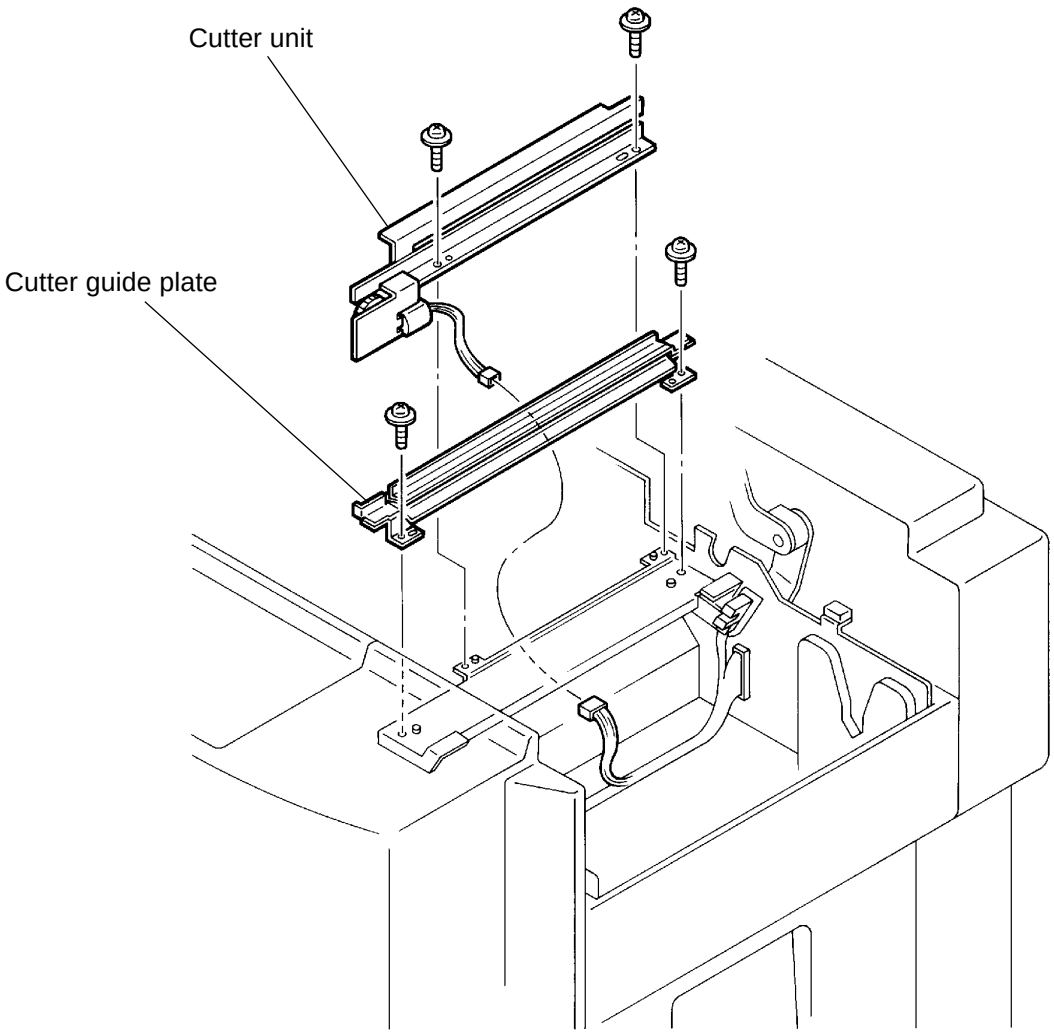
- Match the half-pierced sections of the Cutter unit with its counter part.
- Match the half-pierced section of the Cutter guide plate with its counter part.